



AGELOC®
GALVANIC SPA®
Owner's Manual

Table of Contents

PAGE

Introduction	2
Before You Begin	3
ageLOC® Galvanic Spa® Contents	4
ageLOC® Galvanic Spa® Features	6
ageLOC® Galvanic Spa® Display	7
How To Use	8
Galvanic Spa® Facial Gels with ageLOC®	10
Tru Face® Line Corrector	12
ageLOC® Body Shaping Gel	14
ageLOC® Nutriol® Intensive Scalp & Hair Serum	16
ageLOC® Galvanic Spa® PowerMask	18
ageLOC® Galvanic Spa® EnergEyes™	20
Important Maintenance and Warranty Information	22

ageLOC® Galvanic Spa®

UnLOC visible youth-renewing benefits in 5 minutes or less.

ageLOC Galvanic Spa is our most powerful beauty device, designed to help deliver charged treatment products that visibly improve skin. This versatile device, with its interchangeable attachments and unique products, improves the appearance of lines, wrinkles, and radiance; visibly rejuvenates your complexion; smooths away the appearance of fat and cellulite; and promotes hair that looks full, lustrous, and healthy.

Using galvanic currents, ageLOC Galvanic Spa propels key ingredients to the face, scalp, and body, giving you faster, more noticeable results. And the patented, self-adjusting current technology makes your treatments practically effortless.

ageLOC Galvanic Spa—using science for our greatest visibly youth-renewing benefits.

Before You Begin

Please read the following advisories before using your ageLOC® Galvanic Spa® device:

- ⚠ **Caution: The ageLOC Galvanic Spa device is only for use on healthy skin. Do not use if you have open sores or wounds, are prone to rosacea, have allergies to metal, or if you have problematic or overly sensitive skin. Check with your physician before using if you are pregnant, have a pacemaker or similar device, are epileptic, wear metal braces on your teeth, have a metal implant, or in case of illness.**
- ⚠ ageLOC Galvanic Spa is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- ⚠ Do not apply directly to the lips, eyes, or eyelids. The device and products are for external use only. If you experience any prolonged redness or abnormal irritation, discontinue use immediately and seek medical help if necessary. Keep out of reach of children. Supervise children to ensure they do not play with the device. Use only as directed.
- ⚠ Remove all protective plastic film before beginning.
- ⊘ To reduce the risk of shock, burn, fire, or injury, do not immerse your device in water. Do not place or store where it may fall or be pulled into a bathtub, shower, sink, or toilet. Never operate the device if it has been damaged.
- ⊘ When removing a conductor, do not pinch or hold the middle of the conductor, as this may prevent the release mechanism from working. Hold onto the sides instead.

ageLOC® Galvanic Spa®

Contents

- 1 Owner's Manual
- 2 ageLOC® Galvanic Spa® Device
- 3 Quick Start Guide
- 4 ageLOC® Face Conductor
- 5 Spot Treatment Conductor
- 6 Body Conductor
- 7 Scalp Conductor
- 8 Two AAA Batteries







3

AGELOC® GALVANIC SPA® Quick Start Guide

AGELOC® offers small micro-treatments in 5 minutes or less.
 ageLOC® Galvanic Spa is our most powerful beauty device, designed to help deliver charged treatment products that really improve skin.
 Use the best advice to select the proper conductors and products for your galvanic treatment.

PRODUCT AND BENEFITS	CONDUCTOR	TREATMENT RESSER	USAGE
Galvanic Spa® Facial Gels with ageLOC® Visibly rejuvenate your skin.	ageLOC® Face Conductor	Forearm Forehead	Each two-step regimen will take 5-10 minutes of treatment time. Use 2-3 times each week.
Tru Face® Line Corrector Target and soften the appearance of lines and wrinkles around your nose, mouth, eyes, and forehead.	Spa Treatment Conductor	Forehead	5-minute session Use twice a day, every morning and night. Around eye area: 1-2 minutes Larger areas: 3-5 minutes.
ageLOC® Body Shaping Gel Visibly contour, firm, and smooth skin on arms, legs, abdomen, and buttocks.	Body Conductor	Forearm	Each target area: 5 minutes. Use three times each week.

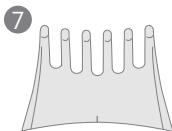

8





Treatment products designed for use with ageLOC® Galvanic Spa® are sold separately.

ageLOC® Galvanic Spa® Features

- 1 Conductor Attachment Receptor
- 2 Conductor Release Button
- 3 Display
- 4 Selection Button
- 5 Chrome Panel
- 6 Battery Compartment
- 7 Conductor Positioning Indicator (small etch)

Note: Remove protective plastic film from both sides of the device before use.

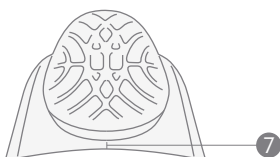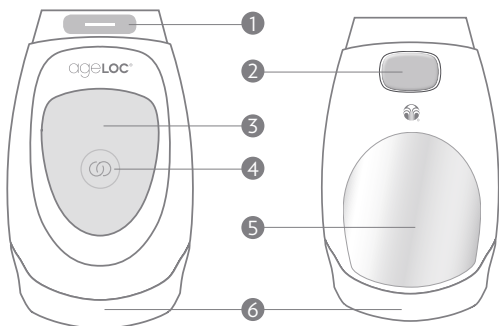


ageLOC Galvanic Spa Display

- 1 Numbers 1, 2, 3, 4, or 5 indicate the treatment number and corresponding product (see below).
- 2 The five dots indicate corresponding treatment length.
- 3 If the batteries are low, each time the device is turned on an amber battery symbol will appear in the bottom of the display and the device will beep. When the batteries are completely dead, an amber battery symbol will appear at the bottom of the display and the device will turn off.

Each product should be used with the correct treatment number:

	Galvanic Spa® Facial Pre-Treat Gel with ageLOC®		ageLOC® Galvanic Spa® EnergEyes™ (Intense Treatment)
	Galvanic Spa® Facial Treatment Gel with ageLOC®		ageLOC® Nutriol® Intensive Scalp & Hair Serum
	Tru Face® Line Corrector		ageLOC® Galvanic Spa® PowerMask
	ageLOC® Body Shaping Gel		ageLOC® Galvanic Spa® EnergEyes™
	ageLOC® Galvanic Spa® PowerMask (Intense Treatment)		

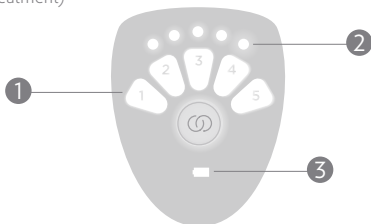

How to use your ageLOC[®] Galvanic Spa[®]

ageLOC Galvanic Spa includes different conductors for your face, scalp, and body, but they are all used in similar ways. Specific instructions for individual treatments can be found on pages 10–21. Please read the instructions before beginning any treatment.

For all treatments, you must attach the appropriate conductor to your device. The skin touching both chrome contact points must be moist to successfully conduct galvanic currents.

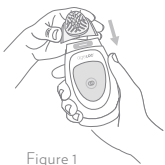


Figure 1

Attach a Conductor: Hold the device with the display facing toward you. Align the conductor positioning indicator with the front of the device, then press the conductor firmly down by its sides until it snaps into place (Figure 1). If the conductor

doesn't connect, make sure it is facing the right direction and is positioned correctly. Don't force the conductor, as this may damage it. ageLOC Galvanic Spa won't work if a conductor head isn't firmly attached.



Figure 2

Remove a Conductor: First turn the device around so the chrome panel faces you. With your free hand, grip the conductor on its sides, and then firmly press the release button (Figure 2). Gently pull the conductor off the device by its sides.

Display Lights: The display will remain lit while the device is on, both as you select and during treatment. If the display blinks on and off, it is either because the device has lost contact with your skin or skin is not moist enough to conduct the current.

Apply Product: Apply an ample amount of product to the area being treated on your face, scalp, or body.

Select Treatment: Press the selection button until the correct treatment number is lit (Figure 3).



Figure 3

Activate Galvanic Current: Your fingers must be touching the chrome panel on the back of the device while the conductor touches your skin. We recommend you thoroughly wet your hands with water or NaPCA Moisture Mist to improve conductivity.* If your fingers slip off the chrome panel during treatment, don't worry—just adjust your hold on the device and resume your spa treatment.

*Remember, the skin touching both chrome contact points must be moist to successfully conduct galvanic currents.

During Treatment: The device will beep every 10 seconds to indicate the unit is on and working. When 30 seconds remain in a treatment, the device will beep every five seconds until the treatment is complete.

Treatment Interruption: You must keep the conductor in contact with the area being treated and keep all contact points moist (Figure 4). If you break contact on the chrome panel or the treatment head, the display will flash on and off. The device will shut off after a couple minutes of non-use.



Figure 4

Treatment Completion: At the end of your treatment, the device will emit a long beep followed by two short beeps and automatically turn off. If you'd like to perform another treatment, press the selection button to scroll to the next treatment number. To turn the device off at any time, simply press the selection button until the display goes blank.

Discontinue use if you experience swelling, redness, or a skin reaction.

Galvanic Spa® Facial Gels with ageLOC®

Pre-treat Setting	Treatment Setting	Conductor
		

Use this treatment three-times each week for visibly rejuvenating results.

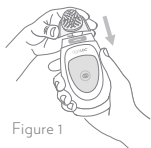


Figure 1

Preparation: Use after a Nu Skin® cleanser of your choice. Attach the ageLOC® Face Conductor to the device (Figure 1).



PRE-TREAT PHASE

STEP 1: Evenly apply an entire ampoule of pre-treat gel to the entire face and neck, avoiding eyes, eyelids, and lips.

STEP 2: Push the selection button until the number 1 is lit on the display (Figure 2). This treatment will take 2 minutes.

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back and begin to slowly glide the conductor head over your skin (Figure 3). Be sure to avoid sensitive areas like your eyes, eyelids, and lips.



Figure 2



Figure 3

The device will beep once, twice, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off. Remove any remaining gel from your skin and the device with a damp towel (Figure 4). Now it's time for the treatment phase.



Figure 4



TREATMENT PHASE

STEP 1: Apply an entire ampoule of treatment gel to your face and neck.

STEP 2: The ageLOC® Face Conductor should already be attached, so press the selection button once to turn the device back on and keep pressing until you select treatment number 2 (Figure 5). This treatment will take 3 minutes.



Figure 5

STEP 3: Again, hold the device with a moistened hand while touching the chrome plate on the back, and begin to slowly glide the conductor head over your skin (Figure 6). Be sure to avoid sensitive areas like your eyes, eyelids, and lips.



Figure 6

The device will beep one, two, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off. Use a damp towel to remove any remaining gel from your skin and the device (Figure 7).



Figure 7

Tru Face® Line Corrector

Setting	Conductor
	

Use this treatment morning and night to target and soften the appearance of lines and wrinkles around your nose, mouth, eyes, and forehead.

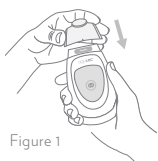


Figure 1

Preparation: Use after a Nu Skin® cleanser and toner of your choice. Attach the Spot Treatment Conductor to the device (Figure 1).

STEP 1: Apply Tru Face Line Corrector to the lines and wrinkles you want to target. Apply to only one of these areas at a time. Make sure to leave a thin layer of product on the surface of your skin.



Figure 2

STEP 2: Push the selection button until the number 3 is lit on the display (Figure 2). This treatment will take 5 minutes.

Pro Tip: When treating multiple areas, you can use the five minutes for more than one area being treated. Small treatment areas typically do not require more than one or two minutes each.



Figure 3

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back and begin to slowly glide the conductor head over your skin (Figure 3). Be careful to avoid sensitive areas like your eyes, eyelids, and lips.

The device will beep once, twice, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off. Repeat steps 1 through 3 for each targeted area. When finished with all treatments, rub any remaining product into your skin and wipe any leftover product from the device with a damp towel (Figure 4).

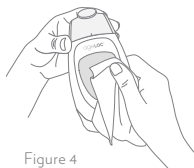




Figure 4

ageLOC® Body Shaping Gel

Setting	Conductor
	

Use this treatment three times each week to visibly contour, firm, and smooth skin on arms, legs, abdomen, and buttocks.

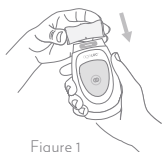


Figure 1

Preparation: Attach the Body Conductor to the device (Figure 1).

STEP 1: Use on clean skin. Apply an ample amount of ageLOC® Body Shaping Gel to the desired area.

STEP 2: Push the selection button until the number 4 is lit on the display (Figure 2). This treatment will take 5 minutes per area.

Pro Tip: 5 minutes is the recommended treatment time for one area, but you may not need the full 5 minutes.



Figure 2

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back and begin to slowly glide the conductor head over your skin (Figure 3).



Figure 3

The device will beep once, twice, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off. Repeat steps 1 through 3 for each targeted area. When all treatments are done, remove any remaining product from your skin and the device with a damp towel (Figure 4).

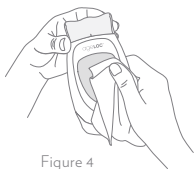


Figure 4

Apply ageLOC® Dermatic Effects® twice daily to help your skin stay visibly smooth and contoured. On days when you use ageLOC® Body Shaping Gel, apply ageLOC® Dermatic Effects after your galvanic treatment.

ageLOC® Nutriol® Intensive Scalp & Hair Serum

Setting	Conductor
	

Use this effortless ritual morning and night to help invigorate the scalp day after day and make hair look and feel divine.



Figure 1

Preparation: Use on towel-dried or dry hair. Attach the Scalp Conductor to the device (Figure 1).



Figure 2

STEP 1: Spray ageLOC Nutriol Intensive Scalp & Hair Serum directly onto the scalp and roots by parting hair (Figure 2).

Pro Tip: Slightly spraying water on dry hair before applying ageLOC Nutriol Intensive Scalp & Hair Serum may make your hair easier to manage for your treatment.

STEP 2: Use fingers to gently massage the serum into scalp and roots (Figure 3). Comb away any unruly strands (Figure 4).

Push the selection button until the number 5 is lit on the display (Figure 5). This treatment will take 2 minutes.



Figure 3



Figure 4



Figure 5

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back. Touch the conductor directly to the scalp and move from the front of your hairline backward, keeping in constant contact with the scalp (Figure 6).



Figure 6

The device will beep once, twice, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

Note: During galvanic treatment, keep Scalp Conductor in constant contact with the scalp

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off.

Do not rinse hair. Style as usual and remove any remaining product from the device with a damp towel (Figure 7).

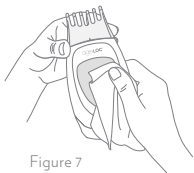


Figure 7

ageLOC® Galvanic Spa® PowerMask

Setting	Conductor
	

Use this intense, luxurious treatment anytime to give you instantly refreshed, hydrated, visibly renewed, and plump-looking skin.

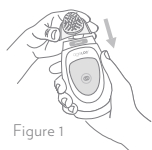


Figure 1



Preparation: Use after a Nu Skin® cleanser and toner of your choice. Attach the ageLOC® Face Conductor to the device (Figure 1).

STEP 1: Delicately unfold the mask and remove the mesh lining on one side (Figure 2). Apply the mask to your face, with the unlined side on your skin (Figure 3). Remove the mesh lining on the other side and (Figure 4) adjust the mask to your face (Figure 5).



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6

STEP 2: Push the selection button until the number 5 is lit on the display. This treatment will take 2 minutes (Figure 6).

Pro Tip: For a more intensive treatment, use selection number 4. This treatment will take 5 minutes.

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back and begin to slowly glide the conductor head over the mask (Figure 7).



Figure 7

The device will beep once, twice, or three times to indicate that it has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off.

Remove any remaining product from the device with a damp towel (Figure 8).

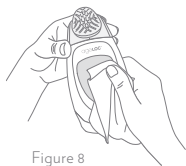

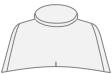


Figure 8

STEP 5: After your galvanic treatment, relax and leave the mask on for 10–15 minutes.

STEP 6: Remove the mask, massage the remaining product into your skin, and follow with your regular skin care regimen.

ageLOC® Galvanic Spa® EnerGEyes™

Setting	Conductor
	

Use this targeted mask treatment anytime to instantly energize, visibly plump, and visually lift the delicate skin around the eyes for a wide-awake, refreshed, and youthful appearance.

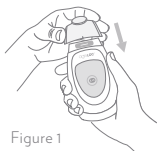


Figure 1



Preparation: Use after a Nu Skin® cleanser and toner of your choice. Attach the Spot Treatment Conductor to the device (Figure 1).

STEP 1: Delicately unfold the mask and remove the mesh lining on one side (Figure 2). Apply the mask to your face, with the unlined side on your skin. Remove the mesh lining on the other side and (Figure 3) adjust the mask to your face, ensuring that it is fully covering key areas of concerns: dark circles, crow's feet, the skin between and around the eyebrows (Figure 4).



Figure 2



Figure 3



Figure 4



Figure 5

STEP 2: Push the selection button until the number 5 is lit on the display (Figure 5). This treatment will take 2 minutes.

Pro Tip: For a more intensive treatment, use Galvanic Spa® setting selection 4. This treatment will take 5 minutes.

STEP 3: Thoroughly wet hands with NaPCA Moisture Mist or water. Hold the device with a moistened hand while touching the chrome plate on the back and begin to slowly glide the conductor head over the mask (Figure 6).



Figure 6

The device will beep once, twice, or three times to indicate that has automatically adjusted to your skin. After this, your galvanic treatment has begun, and the device will beep every 10 seconds to indicate the unit is on and working, and every 5 seconds when your treatment is almost complete.

STEP 4: When your galvanic treatment is over, the device will emit a long beep followed by two short beeps and automatically turn off.

Remove any remaining product from the device with a damp towel (Figure 7).

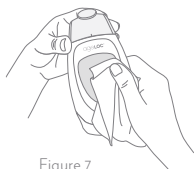


Figure 7

STEP 5: After your galvanic treatment, relax and leave the mask on for another 10–15 minutes.

STEP 6: Remove the mask, massage the remaining product into your skin, and follow with your regular skin care regimen.

Important Maintenance and Warranty Information

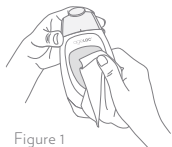


Figure 1

Cleaning Your Device and Conductors:

After finishing a galvanic treatment, remove the conductor from the device and use a damp cloth to clean off any excess product (Figure 1). Dry the device thoroughly and store in a dry place without a conductor attached.



Figure 2

Directions for Changing Batteries:

When the batteries are low, an amber battery icon will appear in the middle of the display and the device will beep four times twice (Figure 2). When this happens, install two new AAA batteries.



Figure 3

To replace the batteries, push just above the battery compartment cover on each side and pull down firmly (Figure 3). The battery cover will separate from the device (Figure 4).



Figure 4

Next, pull gently on the ribbon and remove the old batteries. Insert two new AAA batteries into the compartment and over the ribbon. Failure to tuck the ribbon under the batteries may allow water to leak into the device, resulting in damage to the device (Figure 5).

Finally, slide the battery cover firmly back in place (Figure 6).

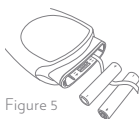


Figure 5



Figure 6

Limited Two-Year Warranty: Nu Skin guarantees ageLOC® Galvanic Spa® to be free from defects in materials and workmanship for a period of two years from the original date of consumer purchase. This warranty does not cover damage to the product as a result of misuse or accident. If the product becomes defective within the two-year warranty period, please call your local Nu Skin office to arrange for a replacement.

Protected by US patent numbers 6.766.199; 7.305.269; D661.811; and numerous international patents issued and pending.



MANUFACTURED BY NSE PRODUCTS, INC.
75 WEST CENTER STREET, PROVO, UT 84601
©2019 NSE PRODUCTS, INC. NUSKIN.COM
1-800-487-1000

94510858/3